



**VOSKER®**

**ACTIVATION VIDEO**

**INSTALLATION VIDEO**



# VOSKER®

## QUICK START GUIDE

# V200



V1.6

## IN THE BOX

- 1x Camera
- 1X Quick start guide
- 1x Adjustable mounting arm
- 1X Micro SIM card is preactivated and inserted in the camera
- 1X 8 GB SD Card
- 1X USB charging cable
- 1X Installation strap

ENGLISH

**Note:** Batteries are sold separately.

User manual, latest firmware & FAQ available at:



**[www.vosker.com](http://www.vosker.com)**

## COMPONENTS

- |                       |   |
|-----------------------|---|
| 1. Antenna            | 11. SD card slot                          |
| 2. Solar panel        | 12. Battery case &<br>Micro SIM card slot |
| 3. LEDs               | 13. Slot for installation strap           |
| 4. Photo lens         | 14. Locking latch                         |
| 5. Light sensor       | 15. Cable lock hole                       |
| 6. Viewing screen     | 16. 12V jack                              |
| 7. Detection lens     | 17. Microphone                            |
| 8. Test light         | 18. Tripod mount                          |
| 9. Navigation buttons | 19. Battery door push button              |
| 10. ON / OFF Switch   |   |



Steel security boxes may reduce the wireless functionalities of the product.

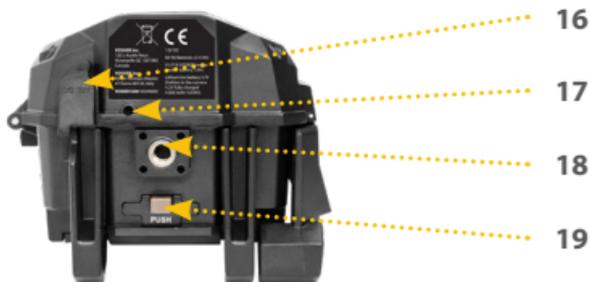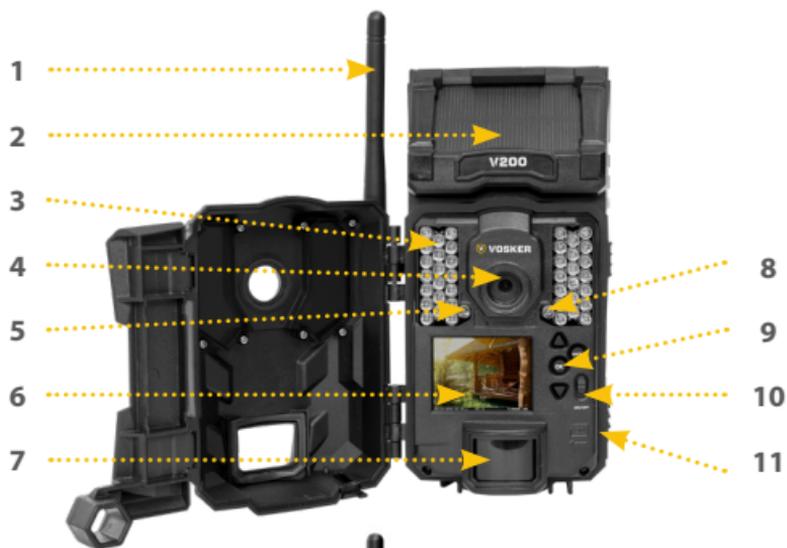


## CHARGING THE INTERNAL BATTERY

Charge the camera for 24-48 hours before use. While charging, make sure the camera is turned off and the solar panel is facing down so it does not interfere with the USB charging process.

Plug the 12V-USB cable from the 12V port at the bottom of the camera and connect it to a USB port. Once plugged, the screen will turn on and it will show the charging battery level for 10 seconds. Press the OK button once more to see the battery level reappear.

ENGLISH

## INSERT SD CARD

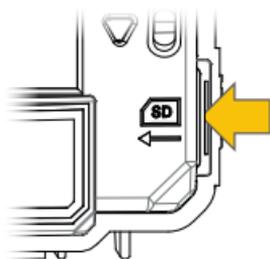

Open the case of your camera (right hand side)

Insert an SD/SDHC memory card (up to 32 GB capacity) in the card slot with the label side facing upward. The card is inserted correctly when click is heard. Always ensure that the camera is OFF before inserting an SD card.




We suggest formatting your SD card if it's been in another electronic device.

## INSTALL VOSKER APP ON YOUR SMARTPHONE OR TABLET

1. Make sure you have a data package with either your smartphone or tablet or a Wi-Fi connection.
2. To install the App, you can either:
  - Get it on Google Play™  
(Google Play is a trademark of Google Inc.)
  - Download on the App Store™  
(App Store is a trademark of Apple Inc.)
3. Search for the VOSKER App from VOSKER.
4. Install the App on your smartphone or tablet.

## CHOOSE A POWER SOURCE

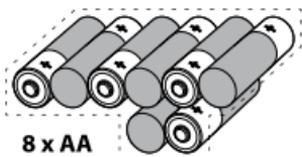

8 x AA

Lithium or Alkaline batteries



12V power source

Be sure to insert the AA batteries according to the polarity indications (+) and (-).

To ensure maximum performance of the camera and prevent battery leak, we recommend the use of new batteries. Use **ONLY** Lithium batteries or **ONLY** Alkaline batteries. Rechargeable AA batteries are not recommended as the lower voltage they produce can cause operational issues.

In order to get best results and longer battery life, we recommend the use of an external 12V source.



4. Back to the VOSKER APP: scan the barcode using the camera on your phone
5. Choose the type of surveillance you are going to do with your VOSKER security camera
6. Enter your personal information
7. Your camera is now activated and you will receive a confirmation message by email and text message.

## VOSKER APP EXPLAINED

In the app, you will have the following 4 options at the bottom:



### **Account:**

Select the data plan and modify your profile information.



### **Status:**

See general information like the cellular signal strength, battery level or percentage of space used on your SD card.



### **Settings:**

Modify the mode of the picture settings, the synchronization frequency & all others



### **Photos:**

Let you see your pictures by date, months and years. Also let you share or download the photo.

**Note:** If you have more than one camera, it will let you select the camera name with the white bar with a scrolling menu at the top of the screen

## SETTING THE APP

The VOSKER App let you configure all the camera's settings. These new settings will take effect the next time the V200 camera connects to update its status. Here are the most important settings, there are more available in the app.

## BASIC SETTINGS

---

### Mode - PHOTO

**Delay :** Sets the time interval between each detection before the camera records the next photo.

**Multi-shot :** Takes up to 2 consecutive shots at each detection, with a 5 second delay between each photo.

---

### Mode - TIME LAPSE

**Interval :** This option allows the camera to take photos at regular preset intervals without detection.

---

### Mode - VIDEO

**Delay :** Sets the time interval between each detection before the camera records the next video.

**Photo first:** When this option is enabled, a photo is taken immediately before each video.

**Video length :** Allows the user to select the duration of the recording.

---

## TRANSFER SETTINGS

**First transfer time:** Allows the user to choose at what time of the day the camera communicates for the first time.

**Transfer frequency:** Allows the user to choose the number of synchronizations that the camera performs daily.

---

## ADVANCED OPTIONS

**Night mode:** Allows the user to set the best option for photos



	OPTIMAL MODE	IR-BOOST MODE	BLUR REDUCTION MODE
Battery life	★★★★★	★★★★★	★★★★★
Flash range	★★★★★	★★★★★	★★★★★
Blur reduction	★★★★★	★★★★★	★★★★★

**Schedule:** Allows the user to set the period of operation of the camera for each day of the week. The start and stop time are the hours during which the camera is in action and can record pictures or videos. For the activation of 24 hours, the same start and stop time must enter 00h00 or 12 AM.

## START THE CAMERA

Turn On the camera and let it do the network search as it can take a few minutes. Once the network search is completed, you'll see the signal strength appear. If you have no signal, move outside or get near a window and restart the camera a few times if need be to get all the information from the cell network.

Note that the signal bars on a V200 might not be equal to your other cellular devices as there are no industry standard and practice to label dBm values to a specific number of bars.

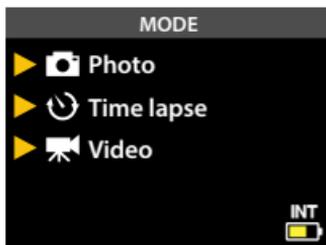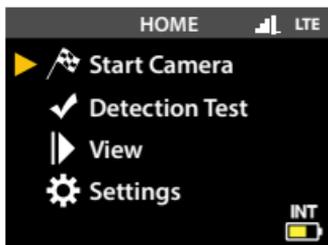

Click on Start Camera and select the desired operating mode (photo, time lapse or video) in the Mode menu by pressing OK. If you start the camera in Video mode, make sure that you have enabled the Photo First setting.

When the mode is selected, the test light in front of the camera will flash for 30 seconds to allow the user to leave the area without being photographed or recorded.

The camera has now updated its status in the VOSKER app with its latest information. The camera is now ready to take pictures and transmit them to your VOSKER app upon the next synch. Synchs are set by default to every 4 hours from midnight.

**Note:** If your camera did not send the photo and/or the status in the 15 minutes following the completion of the last step. Please turn OFF the camera and perform the steps 1 to 5 again. If the problem persists, please consult the Help section of your VOSKER APP.



## INSTALLATION OF THE CAMERA

### Install the camera with or without the mount

#### Recommended installation height:

The camera should be installed at a reasonable distance from the area you want to secure.

#### Ideal installation for quality pictures & videos:

For a better field of view, keep in mind that depending on the weather and the camera you are using, the normal range of detection is 100 feet

To get brighter pictures at night, you should have elements in the background to reflect back the IR flash to the camera.

## **IMPORTANT • BEFORE THE END OF THE 30-DAY FREE TRIAL**

In the VOSKER app, go activate your plan under the Account tab. For more details about the available plans, look at the Account tab in the App or follow the link below.

If you choose not to activate a plan, note that you'll still be able to transmit/receive pictures with our FREE monthly plan. It will allow you to transmit/receive up to 100 photos per month with a photo history of the last 7 days.

**[WWW.VOSKER.COM](http://WWW.VOSKER.COM)**

---

### **THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.**



**Operation is subject to the following two conditions**

- (1) this device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation.

# THANK YOU FOR CHOOSING



ENGLISH

Sit back & relax as this VOSKER cameras are covered by the "Know you're covered" 2 year warranty. We strive on offering all customers a positive, user-friendly experience that will have a lasting impression.

---

FAQ, user manual & latest firmware available at:  
**[www.vosker.com](http://www.vosker.com)**

---

Live Chat support at VOSKER.COM  
**[support@vosker.com](mailto:support@vosker.com)**

---

**USA:** 1-888-986-7537 | **Canada:** 1-866-986-7537 | **UK:** 44 80 00 41 87 96

---

**Join the community**

